GB TRAK 6230

QUICK REFERENCE GUIDE

Please also carefully read the "Instructions for Use".

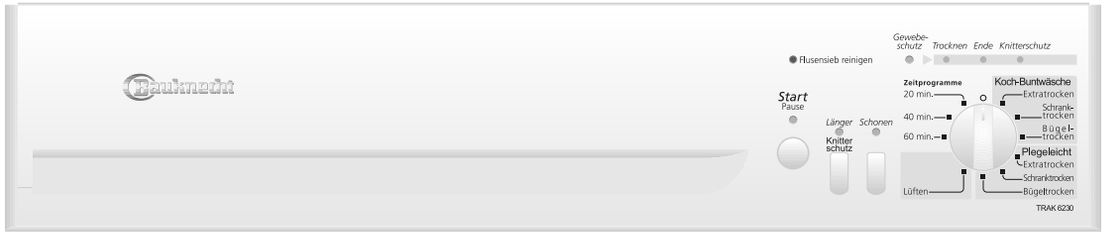

	Very Wet Load	Wet Load	Load	Fabric programmes & Drying levels	Drying options	Länger / Knitterschutz: Anti-Crease Prevents laundry from creasing	Schonen: Gentle Reduces drying intensity (recommended for delicate items)
	Indicative drying times (in minutes)		kg				
Cotton	80' 110'	60' 90'	3.0 5.0	Cotton **Koch-Buntwäsche** Max 5 kg	■ Extratrocken — Extra dry	**Koch-Buntwäsche**	**Koch-Buntwäsche**
	65' 90'	50' 75'	3.0 5.0		■ Schranktrocken — Cupboard dry *	**Koch-Buntwäsche**	**Koch-Buntwäsche**
	55' 75'	40' 65'	3.0 5.0		■ Bügeltrocken — Iron dry *	**Koch-Buntwäsche**	**Koch-Buntwäsche**
Synthetics	30' 40'	20' 35'	1.0 2.5	Synthetics **Pflegeleicht** Max 2.5 kg	■ Extratrocken — Extra dry	**Pflegeleicht**	**Pflegeleicht**
	20' 35'	15' 30'	1.0 2.5		■ Schranktrocken — Cupboard dry *	**Pflegeleicht**	**Pflegeleicht**
	15' 30'	10' 25'	1.0 2.5		■ Bügeltrocken — Iron dry	**Pflegeleicht**	**Pflegeleicht**
Airing	-	-	-	Airing ■ Lüften	**Laundry is aired and refreshed for 30 minutes without heating.**	■ Lüften	-
Time	-	-	-	Time **Zeitprogramme** ■ 20 min. ■ 40 min. ■ 60 min.	**Completes drying or dries single items (suitable for all fabrics).**	■ 20 min. ■ 40 min. ■ 60 min.	-

* Test programmes according IEC 61121.

Start Pause	**Starts the drying cycle. The drying indicator lamp is blinking during the selection phase. Press to confirm the final selection.**
Filter ● Flusensieb reinigen	The indicator lamp lights up when the filter needs cleaning. **Clean the filter at the end of every cycle.**
Overdry protection Gewebe-schutz	The indicator lamp lights up when a humidity controlled program is selected, to indicate the working protection function. Function is not active in time controlled programs and Airing.
PROGRAMME SEQUENCE INDICATORS	
Gewebe-schutz Overdry Protection	**Lit: Overdry protection is working**
Trocknen Drying	**Blinking: programme selected; cycle need to be started. Lit: programme is running.**
Ende End	**Lit: End of programme.**
Knitterschutz Anti-Crease	**Lit: Anti-Crease is running.**

5019 407 00204

PREPARING THE LAUNDRY

1. Check that all fastenings are closed and that pockets are empty.
2. Turn the articles inside out.
3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows:

A) By care symbols (on the collar or inside seam):

Suitable for tumble drying

Tumble drying with reduced drying intensity only. Press Gentle button.

Do not tumble dry

B) By amount and thickness/weight

Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

C) By type of fabrics

Cotton/linen: Towels, cotton jersey, bed and table linen made of cotton or linen.

Synthetics/Easy Care: blouses, shirts, overalls, etc. made of polyester or polyamide, as well as cotton/synthetic mixes.

D) By drying level

- Sort into: iron dry, cupboard dry, etc.

Do not tumble dry: Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Important: only use specific indicated dryer-safe additives and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. **Only use specific indicated dryer-safe plastic items** and **never** dry **rubber or articles contaminated with vegetable oil** in the dryer.

SELECTING A PROGRAMME & OPTIONS

Programme and Options:

- To select a programme, turn the programme selector knob. The drying indicator lamp is blinking, indicating that the cycle needs to be started.
- To select an option, press the corresponding button. The indicator lamp in the button confirms that a selection has been made.
- Press the button again to cancel the option.

STARTING & COMPLETING A PROGRAMME

1. Having selected the desired programme and options, press the Start button.
   If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals, preventing the laundry from creasing.
   Anti-Crease protection re-distributes laundry in the drum.
2. On completion of the programme, set the programme selector knob to position **"0"**.

CHANGING A PROGRAMME

When changing the programme during the drying cycle, the dryer stops. The drying indicator lamp is blinking.
To operate the new programme, press the Start/Pause button again.

INTERRUPTING A PROGRAMME

To interrupt the dryer during operation

1. Set the programme selector knob to Airing.
2. Press the Start button.
   Wait at least 5 minutes before opening the door to allow the dryer to cool down.
   For your safety the programme stops automatically if you open the door.
3. To restart, after door opening, close the door and press the Start/Pause button again.

DAILY MAINTENANCE & CLEANING

Clean the lint filter at the end of every drying cycle:

1. Open the door.
2. Pull the filter upwards.
3. Remove lint using a soft brush or your fingertips.
4. Push the filter back into place.

TROUBLESHOOTING GUIDE

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator lamp on)?

The dryer does not operate:

(after a power failure and/or interruption to the mains supply, always press the Start button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the programme been selected?
- Has the **Start/Pause** button been pressed?

Lint filter indicator lamp light on:

- Is the lint filter clean?
- Is the vent hose blocked?

AFTER-SALES SERVICE

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.